

CRE, CRIE, CRNE, 1~ and 3~ with pressure sensor

- Ⓜ Installation and operating instructions
- Ⓜ Montage- und Betriebsanleitung
- Ⓜ Notice d'installation et d'entretien
- Ⓜ Istruzioni di installazione e funzionamento
- Ⓜ Instrucciones de instalación y funcionamiento
- Ⓜ Instruções de instalação e funcionamento
- Ⓜ Οδηγίες εγκατάστασης και λειτουργίας
- Ⓜ Installatie- en bedieningsinstructies
- Ⓜ Monterings- och driftsinstruktion
- Ⓜ Asennus- ja käyttöohjeet
- Ⓜ Monterings- og driftsinstruktion



Declaration of Conformity

We **GRUNDFOS** declare under our sole responsibility that the products **CRE, CRIE and CRNE with pressure sensor**, to which this declaration relates, are in conformity with the Council Directives on the approximation of the laws of the EEC Member States relating to:

- Machinery (98/37/EEC).
Standard used: EN 292.
- Electromagnetic compatibility (89/336/EEC).
Standard used: EN 61 800-3.
- Electrical equipment designed for use within certain voltage limits (73/23/EEC).
Standards used: EN 60 335-1 and EN 60 335-2-51.

Konformitätserklärung

Wir **GRUNDFOS** erklären in alleiniger Verantwortung, daß die Produkte **CRE, CRIE und CRNE mit Drucksensor**, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EG-Mitgliedstaaten übereinstimmen:

- Maschinen (98/37/EWG).
Norm, die verwendet wurde: EN 292.
- Elektromagnetische Verträglichkeit (89/336/EWG).
Norm, die verwendet wurde: EN 61 800-3.
- Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen (73/23/EWG).
Normen, die verwendet wurden: EN 60 335-1 und EN 60 335-2-51.

Déclaration de Conformité

Nous **GRUNDFOS** déclarons sous notre seule responsabilité que les produits **CRE, CRIE et CRNE avec capteur de pression** auxquels se réfère cette déclaration sont conformes aux Directives du Conseil concernant le rapprochement des législations des Etats membres CEE relatives à

- Machines (98/37/CEE).
Standard utilisé: EN 292.
- Compatibilité électromagnétique (89/336/CEE).
Standard utilisé: EN 61 800-3.
- Matériel électrique destiné à employer dans certaines limites de tension (73/23/CEE).
Standards utilisés: EN 60 335-1 et EN 60 335-2-51.

Dichiarazione di Conformità

Noi **GRUNDFOS** dichiariamo sotto la nostra esclusiva responsabilità che i prodotti **CRE, CRIE e CRNE con sensore di pressione**, ai quali questa dichiarazione si riferisce, sono conformi alle direttive del Consiglio, concernenti il ravvicinamento delle legislazioni degli Stati membri CEE relativi a

- Macchine (98/37/CEE).
Standard usato: EN 292.
- Compatibilità elettromagnetica (89/336/CEE).
Standard usato: EN 61 800-3.
- Materiale elettrico destinato ad essere utilizzato entro certi limiti di tensione (73/23/CEE).
Standard usati: EN 60 335-1 e EN 60 335-2-51.

Declaración de Conformidad

Nosotros **GRUNDFOS** declaramos bajo nuestra única responsabilidad que los productos **CRE, CRIE y CRNE con sensor de presión** a los cuales se refiere esta declaración son conformes con las Directivas del Consejo relativas a la aproximación de las legislaciones de los Estados Miembros de la CEE sobre

- Máquinas (98/37/CEE).
Norma aplicada: EN 292.
- Compatibilidad electromagnética (89/336/CEE).
Norma aplicada: EN 61 800-3.
- Material eléctrico destinado a utilizarse con determinados límites de tensión (73/23/CEE).
Normas aplicadas: EN 60 335-1 y EN 60 335-2-51.

Declaração de conformidade

Nós **GRUNDFOS** declaramos sob nossa responsabilidade que os produtos **CRE, CRIE e CRNE com sensor de pressão**, aos quais esta declaração se refere, estão em conformidade com as Directivas Comunitárias com aproximação das leis dos estados membros da CEE para:

- Máquinas (98/37/CEE).
Norma usada: EN 292.
- Compatibilidades Electromagnéticas (89/336/CEE).
Norma usada: EN 61 800-3.
- Equipamento Eléctrico desenhado para uso de certos limites de tensão (73/23/CEE).
Norma usada: EN 60 335-1 e EN 60 335-2-51.

Δήλωση Συμμόρφωσης

Εμείς η **GRUNDFOS** δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα **CRE, CRIE και CRNE με αισθητήριο πίεσης** συμμορφώνονται με την Οδηγία του Συμβουλίου επί της σύγκλισης των νόμων των Κρατών Μελών της Ευρωπαϊκής Ένωσης σε σχέση με τα:

- Μηχανήματα (98/37/EEC).
Πρότυπο που χρησιμοποιήθηκε: EN 292.
- Ηλεκτρομαγνητική συμβατότητα (89/336/EEC).
Πρότυπο που χρησιμοποιήθηκε: EN 61 800-3.
- Ηλεκτρικές συσκευές σχεδιασμένες για χρήση εντός ορισμένων ορίων ηλεκτρικής τάσης (73/23/EEC).
Πρότυπα που χρησιμοποιήθηκαν: EN 60 335-1 και EN 60 335-2-51.

Overeenkomstigheidsverklaring

Wij **GRUNDFOS** verklaren geheel onder eigen verantwoordelijkheid dat de producten **CRE, CRIE en CRNE met drukopnemer** waarop deze verklaring betrekking heeft in overeenstemming zijn met de Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgevingen van de Lid-Staten betreffende

- Machines (98/37/EEG).
Norm: EN 292.
- Elektromagnetische compatibiliteit (89/336/EEG).
Norm: EN 61 800-3.
- Elektrisch materiaal bestemd voor gebruik binnen bepaalde spanningsgrenzen (73/23/EEG).
Normen: EN 60 335-1 en EN 60 335-2-51.

Försäkran om överensstämmelse

Vi **GRUNDFOS** försäkrar under ansvar, att produkterna **CRE, CRIE och CRNE med trycksensor**, som omfattas av denna försäkran, är i överensstämmelse med Rådets Direktiv om inbördes närmande till EU-medlemsstaternas lagstiftning, avseende

- Maskinell utrustning (98/37/EC).
Använd standard: EN 292.
- Elektromagnetisk kompatibilitet (89/336/EC).
Använd standard: EN 61 800-3.
- Elektrisk material avsedd för användning inom vissa spänningsgränser (73/23/EC).
Använda standarder: EN 60 335-1 och EN 60 335-2-51.

Vastaavuusvakuutus

Me **GRUNDFOS** vakuutamme yksin vastuullisesti, että tuotteet **CRE, CRIE ja CRNE paineanturilla**, jota tämä vakuutus koskee, noudattavat direktiivejä jotka käsittelevät EY:n jäsenvaltioiden koneellisia laitteita koskevien lakien yhdenmukaisuutta seur.:


- Koneet (98/37/EY).
Käytetty standardi: EN 292.
- Elektromagneettinen vastaavuus (89/336/EY).
Käytetty standardi: EN 61 800-3.
- Määrättyjen jänniterajoitusten puitteissa käytettävät sähköiset laitteet (73/23/EY).
Käytetyt standardit: EN 60 335-1 ja EN 60 335-2-51.

Overensstemmelseserklæring

Vi **GRUNDFOS** erklærer under ansvar, at produkterne **CRE, CRIE og CRNE med tryksensor**, som denne erklæring omhandler, er i overensstemmelse med Rådets direktiver om indbyrdes tilnærmelse til EF medlemsstaternes lovgivning om:

- Maskiner (98/37/EEC).
Anvendt standard: EN 292.
- Elektromagnetisk kompatibilitet (89/336/EEC).
Anvendt standard: EN 61 800-3.
- Elektrisk materiel bestemt til anvendelse inden for visse spændingsgrænser (73/23/EEC).
Anvendte standarder: EN 60 335-1 og EN 60 335-2-51.

Bjerringbro, 1st January 2002

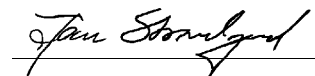

Jan Strandgaard
Technical Manager

CRE, CRIE, CRNE, 1~ and 3~ with pressure sensor

Installation and operating instructions	Page	4	GB
Montage- und Betriebsanleitung	Seite	18	D
Notice d'installation et d'entretien	Page	33	F
Istruzioni di installazione e funzionamento	Pag.	47	I
Instrucciones de instalación y funcionamiento	Pág.	61	E
Instruções de instalação e funcionamento	Pág.	75	P
Οδηγίες εγκατάστασης και λειτουργίας	Σελίδα	89	GR
Installatie- en bedieningsinstructies	Pag.	104	NL
Monterings- och driftsinstruktion	Sida	118	S
Asennus- ja käyttöohjeet	Sivu	132	SF
Monterings- og driftsinstruktion	Side	146	DK

CONTENTS

	Page
1. General	4
2. Installation	4
2.1 Electrical connection – single-phase pumps	5
2.1.1 Mains switch	5
2.1.2 Protection against electric shock – indirect contact	5
2.1.3 Additional protection	5
2.1.4 Motor protection	5
2.1.5 Overvoltage protection	5
2.1.6 Supply voltage	5
2.1.7 Start/stop of pump	5
2.2 Electrical connection – three-phase pumps	6
2.2.1 Mains switch	6
2.2.2 Protection against electric shock – indirect contact	6
2.2.3 Additional protection	6
2.2.4 Motor protection	6
2.2.5 Overvoltage protection	6
2.2.6 Supply voltage	6
2.2.7 Start/stop of pump	6
2.3 Other connections	7
2.4 Signal cables	8
3. Setting the pump	8
3.1 Factory setting	8
4. Setting by means of control panel	8
4.1 Setpoint setting	8
4.2 Setting to max. curve duty	9
4.3 Setting to min. curve duty	9
4.4 Start/stop of pump	9
5. Setting by means of R100	10
5.1 Menu OPERATION	11
5.1.1 Setpoint setting	11
5.1.2 Setting of operating mode	11
5.1.3 Fault indications	11
5.1.4 Alarm log	11
5.2 Menu STATUS	11
5.2.1 Display of actual setpoint	11
5.2.2 Display of operating mode	11
5.2.3 Display of actual value	11
5.2.4 Display of actual speed	12
5.2.5 Display of input power and power consumption	12
5.2.6 Display of operating hours	12
5.3 Menu INSTALLATION	12
5.3.1 Selection of control mode	12
5.3.2 Setting of controller	12
5.3.3 Selection of external setpoint signal	12
5.3.4 Blocking of the buttons on the pump	12
5.3.5 Allocation of pump number	12
5.3.6 Selection of function for digital input	12
5.3.7 Setting of stop function	13
6. External forced-control signals	13
6.1 Start/stop input	13
6.2 Digital input	14
7. External setpoint signal	14
8. Bus signal	14
9. Priority of settings	15
10. Indicator lights and fault signal relay	15
11. Megging	15
12. Technical data – single-phase pumps	16
12.1 Supply voltage	16
12.2 Leakage current	16
12.3 Inputs/output	16
13. Technical data – three-phase pumps	16
13.1 Supply voltage	16
13.2 Leakage current	16
13.3 Inputs/output	16
13.4 Other technical data	17
14. Disposal	17



Before beginning installation procedures, these installation and operating instructions should be studied carefully. **Furthermore, the enclosed installation and operating instructions for the standard pump should be studied carefully.** The installation and operation should also be in accordance with local regulations and accepted codes of good practice.

1. General

GRUNDFOS E-pumps are pumps fitted with frequency-controlled standard motors with built-in PI controller for single-phase or three-phase mains connection. The pumps incorporate a pressure sensor enabling control of the pressure after the pump. The pumps are typically used as booster pumps in systems with variable demands.

The desired setpoint can be set directly on the pump control panel via an input for external setpoint signal or by means of the GRUNDFOS wireless remote control R100.

All other settings are made by means of the R100. Important parameters such as actual value of control parameter, power consumption, etc. can be read via the R100.

The pump incorporates inputs for external potential-free contacts for start/stop and digital function. The digital function enables external setting of max. curve, min. curve, external fault function or flow switch.

The pump incorporates an output for a potential-free fault signal.

Furthermore, the pump has an input for bus communication. Via the bus communication input, the pump can be controlled and monitored by a building management system or another external control system.


2. Installation

To ensure cooling of motor and electronics, the following must be observed:

- Place the pump in such a way that sufficient cooling is ensured.
- The temperature of the cooling air must not exceed 40°C.
- Motor cooling fins and fan blades must be kept clean.

When installed outdoors, the motor must be provided with a suitable cover to avoid condensation on the electronic components, fig. 1.

Fig. 1

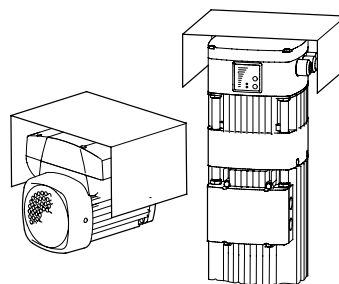

For further installation, see installation and operating instructions for the standard pump.

TM02 0789 0101

2.1 Electrical connection – single-phase pumps

Note: The user or the installer is responsible for the installation of the correct earthing and protection according to valid national and local standards. All operations must be carried out by a qualified electrician.



Never make any connections in the pump terminal box unless the electricity supply has been switched off for at least 5 minutes.

2.1.1 Mains switch

The pump must be connected to an external all-pole mains switch with a contact separation of at least 3 mm in each pole according to IEC 364.

2.1.2 Protection against electric shock – indirect contact

 


The pump must be earthed and protected against indirect contact in accordance with national regulations.

Protective earth conductors must always have a yellow/green (PE) or yellow/green/blue (PEN) colour marking.

2.1.3 Additional protection

If the pump is connected to an electric installation where an earth leakage circuit breaker is used as additional protection, this circuit breaker must be marked with the following symbol:



ELCB

Note: When an earth leakage circuit breaker is selected, the total leakage current of all the electrical equipment in the installation must be taken into account.

The leakage current of the pump can be found in section 12.2 *Leakage current*.

2.1.4 Motor protection

The pump requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking (IEC 34-11: TP 211).

2.1.5 Overvoltage protection

The pump is overvoltage-protected through built-in varistors between phase-neutral and phase-earth.

2.1.6 Supply voltage

1 x 200-240 V \pm 10%, 50/60 Hz, PE.


The supply voltage and frequency are marked on the pump nameplate. Please make sure that the motor is suitable for the electricity supply on which it will be used.

The wires in the pump terminal box must be as short as possible. Excepted from this is the protective earth conductor which must be so long that it is the last one to be disconnected in case the cable is inadvertently pulled out of the cable entry.

Figure 2 shows an example of a mains-connected pump with mains switch, back-up fuses and additional protection.

Fig. 2

MGE 71 and MGE 80

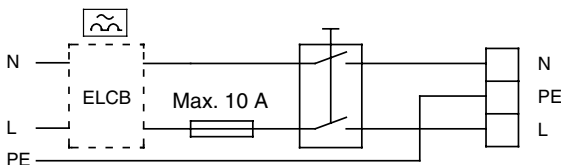


TM02 0792 0101

Actual mains connection is shown in fig. 3.

Fig. 3

MGE 71 and MGE 80

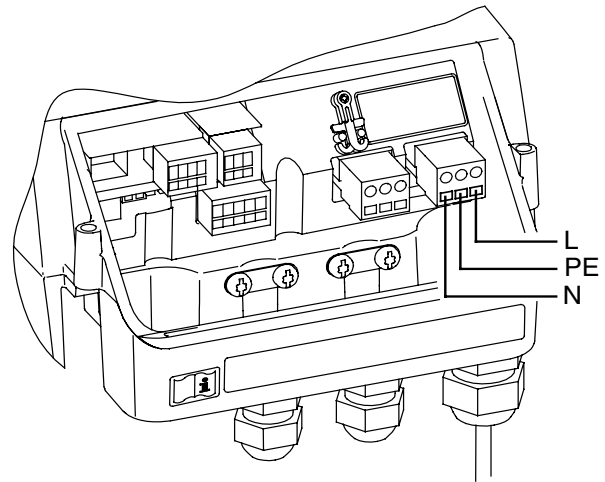

TM02 0827 4702



2.1.7 Start/stop of pump

The number of starts and stops via the mains voltage must not exceed 4 times per hour.

When the pump is switched on via the mains, it will start after approx. 5 seconds.

If a higher number of starts and stops is desired, the input for external start/stop must be used when starting/stopping the pump. When the pump is started/stopped via an external on/off switch, it will start immediately.

2.2 Electrical connection – three-phase pumps

Note: The user or the installer is responsible for the installation of the correct earthing and protection according to valid national and local standards. All operations must be carried out by a qualified electrician.



Never make any connections in the pump terminal box unless the electricity supply has been switched off for at least 5 minutes.

2.2.1 Mains switch

The pump must be connected to an external all-pole mains switch with a contact separation of at least 3 mm in each pole according to IEC 364.

2.2.2 Protection against electric shock – indirect contact



The pump must be earthed and protected against indirect contact in accordance with national regulations.

Protective earth conductors must always have a yellow/green (PE) or yellow/green/blue (PEN) colour marking.

Note: As the leakage current of 4 kW to 7.5 kW motors is > 3.5 mA, these motors must be connected to especially reliable/sturdy earth connections.

The leakage current of the individual motor size can be found in section 13.2 *Leakage current*.

EN 50 178 and BS 7671 specify the following:

Leakage current > 3.5 mA:

The pump must be stationary and installed permanently. Furthermore, the pump must be connected permanently to the electricity supply or may be connected via an industrial type of plug (CEE). The plug must comply with EN 60 309 or IEC 309.

- The earth connection must be carried out as duplicate conductors.

2.2.3 Additional protection

If the pump is connected to an electric installation where an earth leakage circuit breaker is used as additional protection, this circuit breaker must be of the type:

- which is suitable for handling leakage currents and cutting-in with short pulse-shaped leakage.
- which trips out when alternating fault currents and fault currents with DC content, i.e. pulsating DC and smooth DC fault currents, occur.

For these pumps an earth leakage circuit breaker **type B** must be used.

This circuit breaker must be marked with the following symbols:



Note: When an earth leakage circuit breaker is selected, the total leakage current of all the electrical equipment in the installation must be taken into account.

The leakage current of the pump can be found in section 13.2 *Leakage current*.

2.2.4 Motor protection

The pump requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking (IEC 34-11: TP 211).

2.2.5 Overvoltage protection

The pump is overvoltage-protected through built-in varistors between the phases and between phases and earth.

2.2.6 Supply voltage


3 x 380-415 V ±10%, 50/60 Hz, PE.

The supply voltage and frequency are marked on the pump nameplate. Please make sure that the motor is suitable for the electricity supply on which it will be used.

The wires in the pump terminal box must be as short as possible. Excepted from this is the protective earth conductor which must be so long that it is the last one to be disconnected in case the cable is inadvertently pulled out of the cable entry.

Figure 4 shows an example of a mains-connected pump with mains switch, back-up fuses and additional protection.

Fig. 4

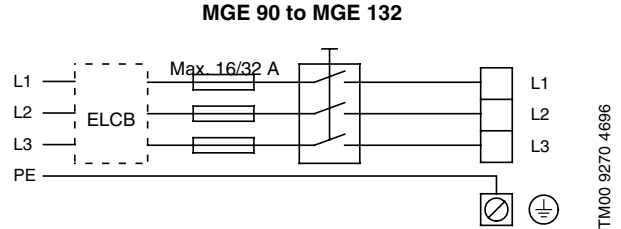

Actual mains connection is shown in figs. 5 and 6.

Fig. 5

MGE 90 and MGE 100


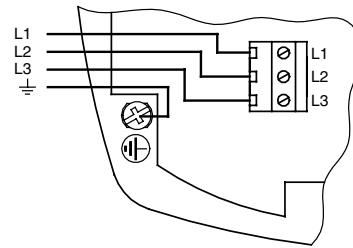


Fig. 6

MGE 112 and MGE 132

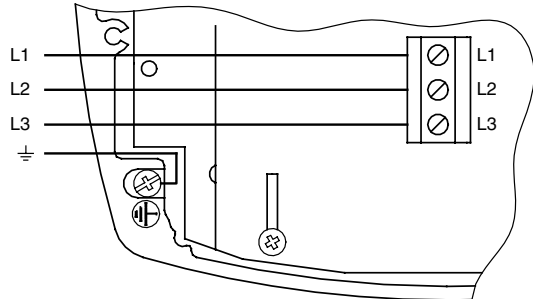

2.2.7 Start/stop of pump

The number of starts and stops via the mains voltage must not exceed 4 times per hour.

When the pump is switched on via the mains, it will start after approx. 5 seconds.

If a higher number of starts and stops is desired, the input for external start/stop must be used when starting/stopping the pump. When the pump is started/stopped via an external on/off switch, it will start immediately.

2.3 Other connections

The connection terminals of external potential-free contacts for start/stop and digital function, external setpoint signal, sensor signal, GENIbus and fault signal relay are shown in figs. 7, 8 and 9.

Note: If no external on/off switch is connected, short-circuit terminals 2 and 3 using a short wire.

Note: As a precaution, the wires to be connected to the following connection groups must be separated from each other by reinforced insulation in their entire lengths:

1. **Inputs** (external start/stop, digital function, setpoint and sensor signals, terminals 1-9, and bus connection, A, Y, B).

All inputs (group 1) are internally separated from the mains-conducting parts by reinforced insulation and galvanically separated from other circuits.

All control terminals are supplied by protective extra-low voltage (PELV), thus ensuring protection against electric shock.

2. **Output** (fault signal relay, terminals NC, NO, C).

The output (group 2) is galvanically separated from other circuits. Therefore, the supply voltage or protective extra-low voltage can be connected to the output as desired.

3. **Supply voltage** (terminals L and N or L1, L2, L3).

A galvanically safe separation must fulfil the requirements for reinforced insulation including creepage distances and clearances specified in EN 50 178.

Fig. 7

MGE 71 and MGE 80

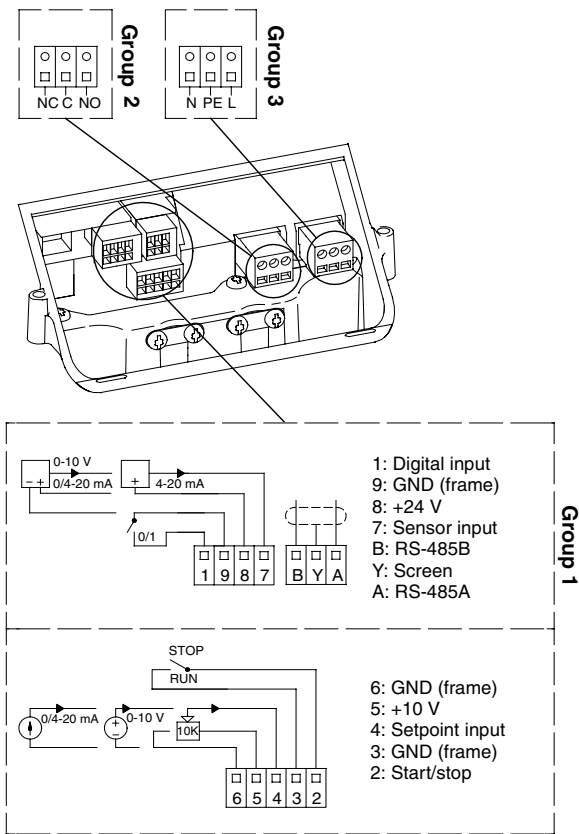


Fig. 8

MGE 90 and MGE 100


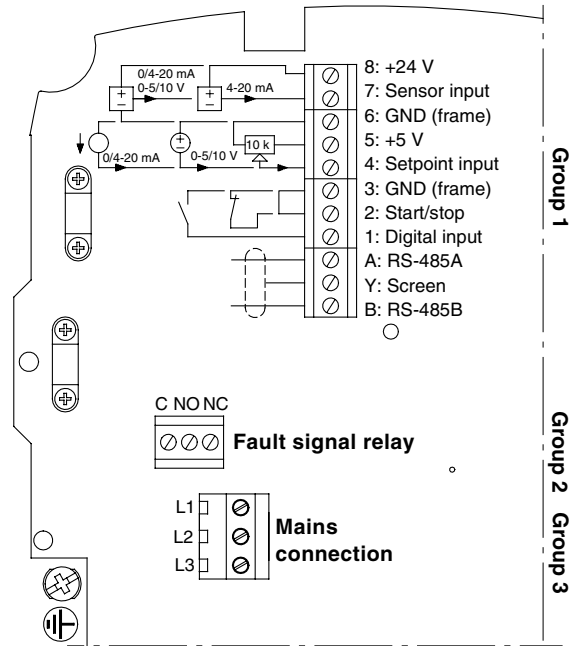


Fig. 9


MGE 112 and MGE 132

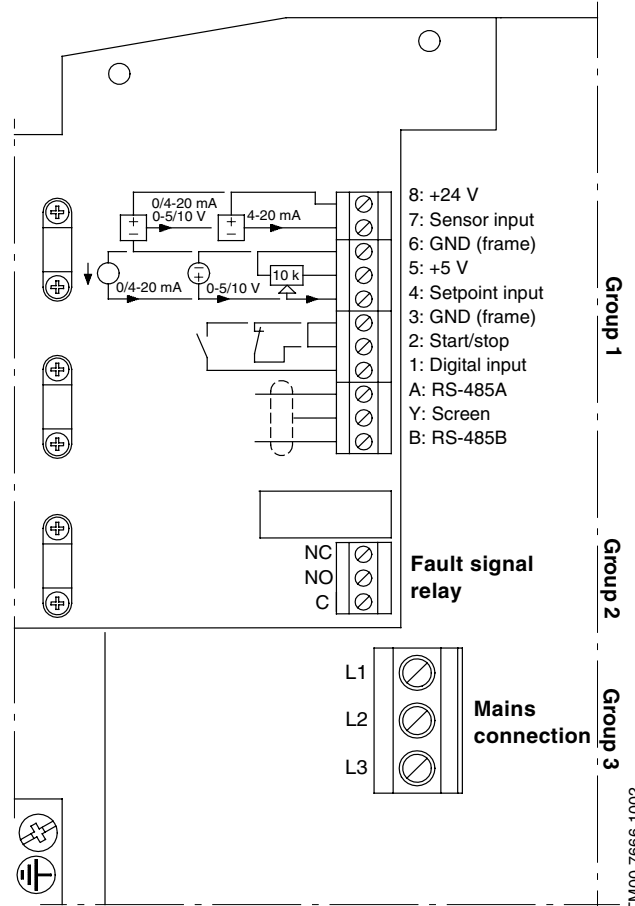

2.4 Signal cables

- Use screened cables having a cross-sectional area of min. 0.5 mm² and max. 1.5 mm² for external on/off switch, digital input, setpoint and sensor signals.
- The screens of the cables must be connected to frame at both ends with good frame connection. They must be as close as possible to the terminals, fig. 10.

Fig. 10

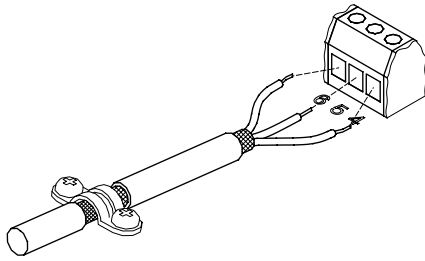


TM00 7667 1696

- Screws for frame connections must always be tightened whether a cable is fitted or not.
- The wires in the pump terminal box must be as short as possible.

For the bus connection a screened 2-core cable must be used. Connect the screen to terminal Y at both ends, fig. 11.

Fig. 11

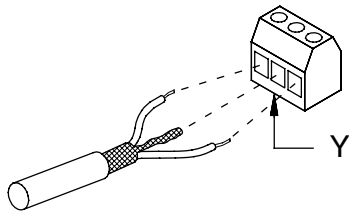

TM00 7601 0101


3. Setting the pump

E-pumps with pressure sensor can be set to two control modes, i.e. constant pressure and constant curve.

In **constant pressure** mode, the pump will maintain a constant pressure after the pump, irrespective of the flow, fig. 12.

In **constant curve** mode, the pump is not controlled. The curve can be set within the range from min. curve to max. curve.

Fig. 12

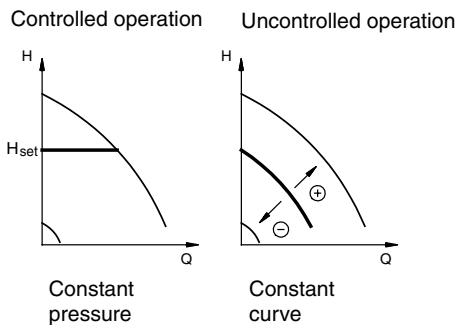


TM00 7668 1696

The pumps have been factory-set to constant pressure, see section 3.1 *Factory setting*.

In addition to normal operation (constant pressure and constant curve), the following operating modes can be selected, **Stop**, **Min.** or **Max.**, fig. 13.

Fig. 13

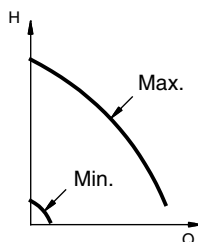

TM00 5547 0995

The max. curve can for instance be used in connection with the venting procedure during installation.

The min. curve can be used in periods in which a minimum flow is required.

The operating modes (Stop, Normal, Min., Max.) can all be set on the pump control panel.

If the electricity supply to the pump is disconnected, the pump setting will be stored.

The remote control R100 offers additional possibilities of setting and status displays, see section 5. *Setting by means of R100*.

3.1 Factory setting

The pumps have been factory-set to constant pressure. The setpoint value corresponds to 50% of the sensor measuring range (see sensor nameplate).

Other pump settings are marked with **bold**-faced type under each individual display in sections 5.1 *Menu OPERATION* and 5.3 *Menu INSTALLATION*.

4. Setting by means of control panel




At high system temperatures, the pump may be so hot that only the buttons should be touched to avoid burns.

The pump control panel, fig. 14, incorporates the following:

- Buttons, “+” and “-”, for setpoint setting.
- Light fields, yellow, for indication of setpoint.
- Indicator lights, green (operation) and red (fault).

Fig. 14

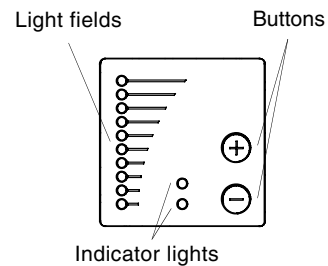

TM00 7600 1196


4.1 Setpoint setting

The setpoint of the pump is set by pressing the button “+” or “-”. The light fields on the control panel will indicate the setpoint set. See the following example.

Example: Pump in constant pressure control mode:

Figure 15 shows that the light fields 5 and 6 are activated, indicating a desired setpoint of 3 bar with a sensor measuring range from 0 to 6 bar. The setting range is equal to the sensor measuring range (see sensor nameplate).

Fig. 15

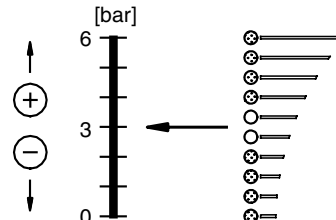


TM00 7743 1896

4.2 Setting to max. curve duty

Press “+” continuously to change over to the max. curve of the pump (top light field flashes). When the top light field is on, “+” must be pressed for 3 seconds before the light field starts flashing.

To change back, press “-” continuously until the desired setpoint is indicated.

Fig. 16

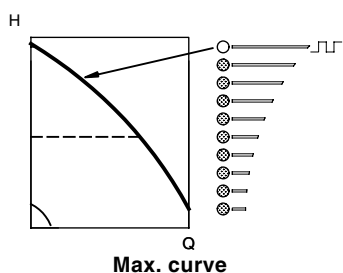


TM00 7345 1196

4.3 Setting to min. curve duty

Press “-” continuously to change over to the min. curve of the pump (bottom light field flashes). When the bottom light field is on, “-” must be pressed for 3 seconds before the light field starts flashing.

To change back, press “+” continuously until the desired setpoint is indicated.

Fig. 17

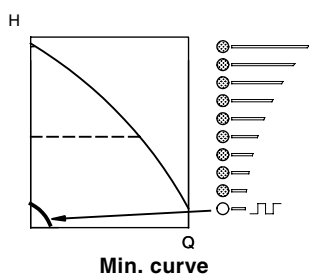

TM00 7346 1196

4.4 Start/stop of pump

Stop the pump by continuously pressing “-” until none of the light fields are activated and the green indicator light flashes.


Start the pump by continuously pressing “+” until the desired setpoint is indicated.

5. Setting by means of R100

The pump is designed for wireless communication with the GRUNDFOS remote control R100.


The R100 communicates with the pump via infra-red light. The transmitter and the receiver are incorporated in the pump control panel, fig. 18.

Fig. 18

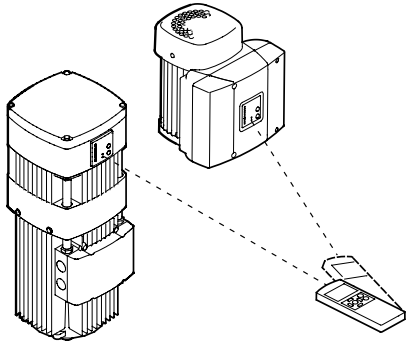

TM02 0791 0101

Fig. 19

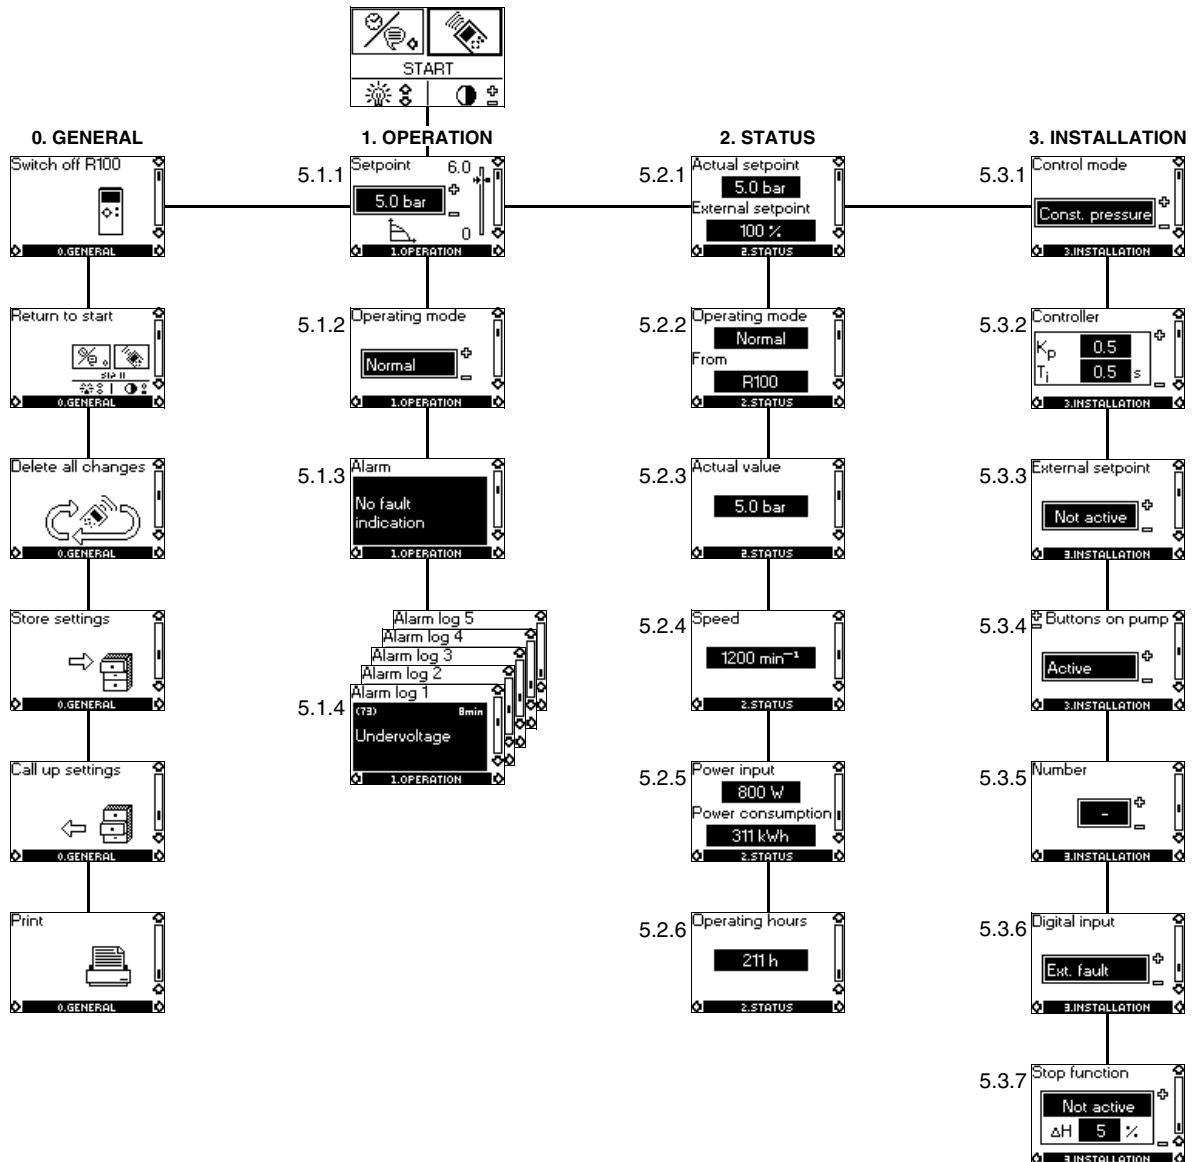

During communication, the R100 must be pointed at the control panel.

When the R100 communicates with the pump, the red indicator light will flash rapidly.

The R100 offers additional possibilities of setting and status displays for the pump.

The displays are divided into four parallel menus, fig. 19:

0. GENERAL (see operating instructions for the R100)

1. OPERATION

2. STATUS


3. INSTALLATION

The number stated at each individual display in fig. 19 refers to the section in which the display is described.

5.1 Menu OPERATION

When communication between the R100 and the pump has been established, the first display in this menu will appear.

5.1.1 Setpoint setting

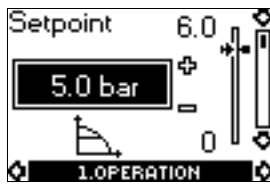

- ▶ Setpoint set
- ▬ Actual setpoint
- Actual value

In this display, the desired pressure is set in [bar].

In **constant pressure** mode, the setting range is equal to the sensor measuring range (in the example 0 to 6 bar).

In **constant curve** mode, the setpoint is set in % of the maximum curve. The curve can be set within the range from min. curve to max. curve.

Select one of the following operating modes:


- *Stop*,
- *Min.* (min. curve),
- *Max.* (max. curve).

If the pump is connected to an external setpoint signal, the setpoint in this display will be the maximum value of the external setpoint signal, see section 7. *External setpoint signal*.

If the pump is controlled via external signals (*Stop*, *Min. curve* or *Max. curve*) or a bus, this will be indicated in the display if setpoint setting is attempted.

In this case, the number of possible settings will be reduced, see section 9. *Priority of settings*.

5.1.2 Setting of operating mode

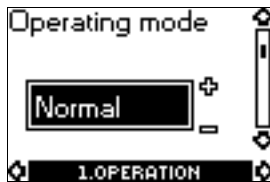


Select one of the following operating modes:

- *Stop*,
- *Min.*,
- **Normal** (duty),
- *Max.*

The operating modes can be selected without changing the setpoint setting.

5.1.3 Fault indications

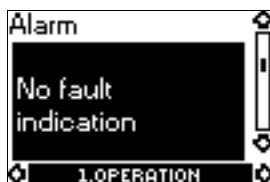

If the pump is faulty, the cause will appear in this display.


Possible causes:

- *Too high motor temperature*
- *Undervoltage*
- *Overvoltage*
- *Phase failure* (three-phase pumps only)
- *Mains supply failure* (three-phase pumps only)
- *Too many restarts* (after faults)
- *Overload*
- *Sensor signal outside signal range*

- *Setpoint signal outside signal range* (only 4-20 mA)
- *External fault*
- *Dry running*
- *Other fault*

A fault indication can be reset in this display if the cause of the fault has disappeared.

5.1.4 Alarm log

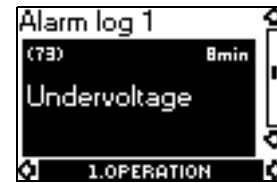

If faults have been indicated, the last five fault indications will appear in the alarm log. "Alarm log 1" shows the newest/latest fault. The example shows the fault indication "Undervoltage", the fault code and the number of minutes the pump has been connected to the electricity supply after the fault occurred.

The time cannot be displayed for three-phase pumps as the software does not support this function.

5.2 Menu STATUS

The displays appearing in this menu are status displays only. It is not possible to change or set values.

The displayed values are the values that applied when the last communication between the pump and the R100 took place. If a status value is to be updated, point the R100 at the control panel and press "OK".

If a parameter, e.g. speed, should be called up continuously, press "OK" constantly during the period in which the parameter in question should be monitored.

The tolerance of the displayed value is stated under each display. The tolerances are stated as a guide in % of the maximum values of the parameters.

5.2.1 Display of actual setpoint



Tolerance: $\pm 2\%$

This display shows the actual setpoint and the external setpoint in % of the range from minimum value to the setpoint set, see section 7. *External setpoint signal*.

5.2.2 Display of operating mode



This display shows the actual operating mode (*Stop*, *Min.*, *Normal* (duty) or *Max.*). Furthermore, it shows where this operating mode was selected (*R100*, *Pump*, *BUS*, *External* or *Stop func.*). For further details about the stop function (*Stop func.*), see section 5.3.7 *Setting of stop function*.

5.2.3 Display of actual value



The actually measured value will appear in this display.


5.2.4 Display of actual speed



Tolerance: $\pm 5\%$

The actual pump speed will appear in this display.

5.2.5 Display of input power and power consumption

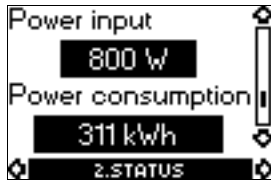

Tolerance: $\pm 10\%$

This display shows the actual pump input power from the mains supply. The power input is displayed in W or kW.

The pump power consumption can also be read from this display. The value of power consumption is an accumulated value calculated from the pump's birth and it cannot be reset.

5.2.6 Display of operating hours



Tolerance: $\pm 2\%$

The value of operating hours is an accumulated value and cannot be reset.

5.3 Menu INSTALLATION

5.3.1 Selection of control mode




Select one of the following control modes (see fig. 12):

- **Const. pressure** (constant pressure),
- **Const. curve** (constant curve).

The desired performance is set in section 5.1.1 *Setpoint setting*.

Note: If the pump is connected to a bus (see section 8. *Bus signal*), it is not possible to select the control mode via the R100.

5.3.2 Setting of controller

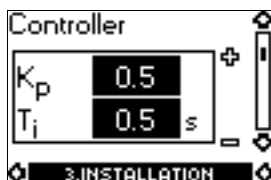

In this display, the gain (K_p) and the integral-action time (T_i) of the built-in PI controller can be set if the factory setting is not the optimum setting:

- The gain (K_p) is set within the range from 0.1 to 20.
- The integral-action time (T_i) is set within the range from 0.1 to 3600 s. If 3600 s is selected, the controller will function as a P controller.

Setting the PI controller:

For most applications, the factory setting of the controller constants K_p and T_i will ensure optimum pump operation.

In some systems, it may be desirable to change the controller setting to optimize the pump operation.

If a quicker pump reaction is required in cases where the pumping requirement changes quickly, reduce T_i .

If a slower reaction is required, increase T_i .

K_p has been factory-set to the optimum value (0.5).

5.3.3 Selection of external setpoint signal



The input for external setpoint signal can be set to different signal types.

Select one of the following types:

- 0-5 V (three-phase pumps only),
- 0-10 V,
- 0-20 mA,
- 4-20 mA,
- **Not active**.

If *Not active* is selected, the setpoint set by means of the R100 or on the control panel will apply.

The setpoint set is the maximum value of the external setpoint signal, section 7. *External setpoint signal*. The actual value of the external setpoint can be read from section 5.2.1 *Display of actual setpoint*.

5.3.4 Blocking of the buttons on the pump



The buttons “+” and “-” on the pump can be set to:

- **Active**,
- **Not active**.

5.3.5 Allocation of pump number



A number between 1 and 64 can be allocated to the pump. In the case of bus communication, a number must be allocated to each pump.

5.3.6 Selection of function for digital input



The digital input of the pump (terminal 1, fig. 7, 8 or 9) can be set to different functions.

Select one of the following functions:

- *Min.* (min. curve),
- *Max.* (max. curve),
- **Ext. fault** (external fault),
- *Flow switch*.

The selected function is activated by closing the contact between the following terminals:

- 1 and 9 of single-phase pumps (fig. 7) and
- 1 and 3 of three-phase pumps (fig. 8 or 9).

See also section 6.2 *Digital input*.

Min.:

When the input is activated, the pump is operating according to the min. curve.

Max.:

When the input is activated, the pump is operating according to the max. curve.

Ext. fault:

When the input is activated, a timer is started. If the input is activated for more than 5 seconds, the pump is stopped and a fault is indicated. If the connection is disconnected for more than 5 seconds, the fault condition will cease and the pump can be restarted manually by resetting the fault indication.

The typical application will be detection of missing inlet pressure or water shortage by means of a pressure switch installed on the suction side of a pump.

Flow switch:

When this function is active, the pump will be stopped when a connected flow switch detects a low flow.

When the input is activated for more than 5 seconds, the stop function incorporated in the pump will take over, see section 5.3.7 *Setting of stop function*.

5.3.7 Setting of stop function



When the stop function is active, the pump will be stopped at very low flows to avoid unnecessary power consumption.

The stop function can be set to:

- *Active*,
- **Not active**.


There are two possibilities of low-flow detection:

1. By means of the built-in "low-flow detector" which automatically starts functioning if no flow switch is connected to the digital input. The pump will check the flow regularly by reducing the speed for a short time, thus checking the change in pressure. If there is no or a small change in pressure, the pump will detect a low flow.
2. By means of a flow switch connected to the digital input. When the input is activated for more than 5 seconds, the stop function of the pump takes over. Unlike the built-in low-flow detector, the flow switch measures the minimum flow at which the pump must stop. The pump will not check the flow regularly by reducing the speed.

When the pump detects a low flow, the speed will be increased until the stop pressure (actual setpoint + 0.5 x ΔH) is reached and the pump stops. When the pressure has fallen to the start pressure (actual setpoint - 0.5 x ΔH), the pump will restart.

ΔH indicates the difference between start and stop pressures, fig. 20.

Fig. 20

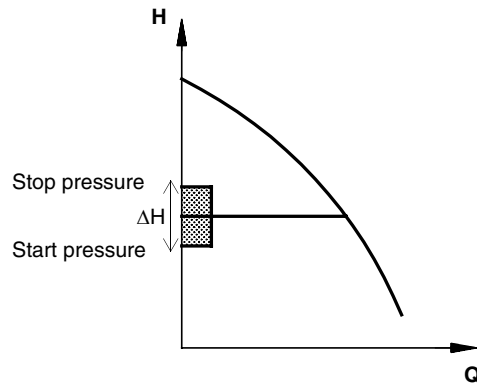


ΔH is factory-set to **10% of actual setpoint**.

ΔH can be set within the range from 5% to 30% of actual setpoint.

Note: The non-return valve must be fitted immediately before the pump, fig. 21.

Fig. 21

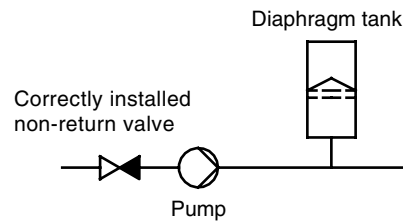

The stop function requires a diaphragm tank of a certain minimum size. The tank must be installed immediately after the pump and the precharge pressure must be 0.7 x actual setpoint.

Recommended diaphragm tank size when no flow switch is connected.

Nominal flow of pump [m³/h]	Diaphragm tank size [litres]
0-6	8
7-24	18
25-40	50
41-70	120

If a diaphragm tank of the above size is installed in the system, the factory setting of ΔH is the correct setting.

If the tank installed is too small, the pump will start and stop too often. This can be remedied by increasing ΔH.

6. External forced-control signals

The pump has inputs for external signals for the forced-control functions:

- Start/stop of pump.
- Digital function.

6.1 Start/stop input

Functional diagram: Start/stop input:

Start/stop (terminals 2 and 3)		
		Normal duty
		Stop

TM00 7744 1896

TM00 7745 1896



6.2 Digital input

By means of the R100, one of the following functions can be selected for the digital input:

- Min. curve.
- Max. curve.
- External fault.
- Flow switch.

Functional diagram: Input for digital function:

Digital function (terminals 1 and 9 – single-phase pumps) (terminals 1 and 3 – three-phase pumps)		
		Normal duty
		Min. curve
		Max. curve
		External fault
		Flow switch

7. External setpoint signal


By connecting an analog signal transmitter to the input for the setpoint signal (terminal 4), it is possible to remote-set the setpoint.

The actual external signal (0-5 V (three-phase pumps only), 0-10 V, 0-20 mA, 4-20 mA) must be selected via the R100, see section 5.3.3 Selection of external setpoint signal.

If constant curve duty is selected by means of the R100, the pump can be controlled by any controller.

In **constant pressure** mode, the setpoint can be set externally within the range from the lower value of the sensor measuring range to the setpoint set on the pump or by means of the R100, fig. 22.


Fig. 22

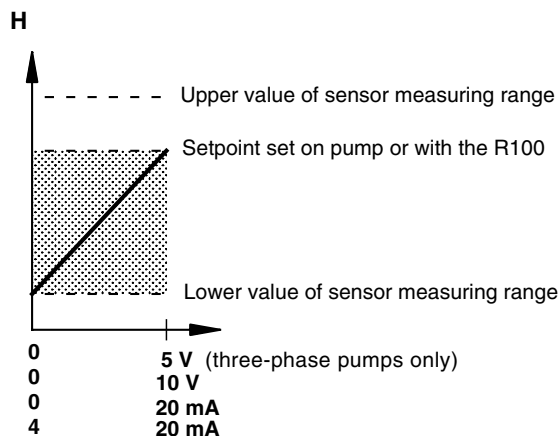

Example: At a setpoint set of 5 bar and an external setpoint of 80%, the actual setpoint will be $0.80 \times 5 \text{ bar} = 4 \text{ bar}$ as the lower value of the sensor measuring range is 0 bar.

In **constant curve** mode, the setpoint can be set externally within the range from the min. curve to the setpoint set on the pump or by means of the R100, fig. 23.

Fig. 23

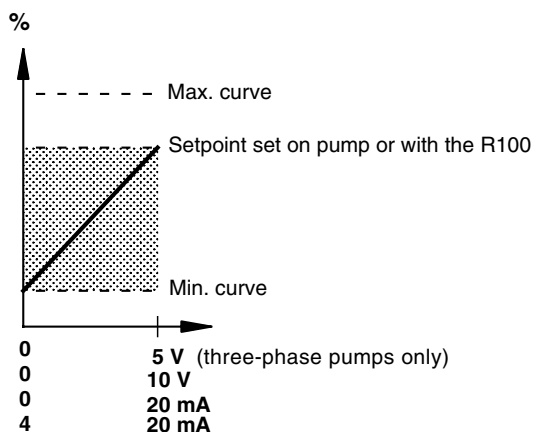

8. Bus signal

The pump enables serial communication via an RS-485 input. The communication is carried out according to the GRUNDFOS bus protocol, GENibus protocol, and enables connection to a building management system or another external control system.

Via the bus signal, it is possible to remote-set pump operating parameters, like setpoint, operating mode, etc. At the same time, the pump can provide status information about important parameters, like actual value of control parameter, input power, fault indications, etc.

Contact GRUNDFOS for further details.

Note: If a bus signal is used, the number of settings available via the R100 will be reduced.

TM00 7669 1696

9. Priority of settings

The start/stop and digital inputs will influence the number of possible settings.

By means of the R100, the pump can always be set to max. curve duty or to stop.

If two or more functions are activated at the same time, the pump will operate according to the function with the highest priority.

The priority of the settings is as shown in the following tables:

Without bus signal		
Priority	Possible settings	
	Control panel on pump or R100	External signals
1	Stop	
2	Max. curve	
3		Stop
4		Max. curve
5	Min. curve	Min. curve
6	Setpoint setting	Setpoint setting

Example: If, via the digital input, the pump has been forced to operate according to the max. curve, the pump control panel and the R100 can only set the pump to stop.


With bus signal			
Priority	Possible settings		
	Control panel on pump or R100	External signals	Bus signal
1	Stop		
2	Max. curve		
3		Stop	Stop
4			Max. curve
5			Min. curve
6			Setpoint setting

Example: If, via the digital input, the pump has been forced to operate according to the max. curve, the pump control panel, the R100 and the bus signal can only set the pump to stop.

10. Indicator lights and fault signal relay

The operating condition of the pump is indicated by the green and red indicator lights on the pump control panel, fig. 24.

Fig. 24

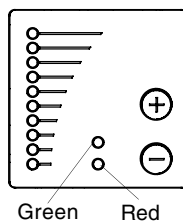

The pump incorporates a fault signal relay with a potential-free changeover contact for external fault indication.

The functions of the two indicator lights and the fault signal relay are as shown in the following table:

Indicator lights		Fault signal relay	Description
Fault (red)	Operation (green)		
Off	Off		The electricity supply has been switched off.
Off	Permanently on		The pump is operating.
Off	Flashing		The pump has been set to stop.
Permanently on	Off		The pump has stopped because of a fault. Restarting will be attempted (it may be necessary to restart the pump by resetting the fault indication). In case of the fault causes "dry running" and "external fault", the pump must be restarted manually by resetting the fault indication.
Permanently on	Permanently on		The pump is operating, but it has been stopped because of a fault. If the cause is "sensor signal outside signal range", the pump will continue operating according to the max. curve and the fault indication cannot be reset until the signal is inside the signal range. If the cause is "setpoint signal outside signal range", the pump will continue operating according to the min. curve and the fault indication cannot be reset until the signal is inside the signal range.
Permanently on	Flashing		The pump has been set to stop, but it has been stopped because of a fault.

A fault indication can be reset in one of the following ways:

- By briefly pressing the button "+" or "-" on the pump. This will not change the setting of the pump. A fault indication cannot be reset by means of "+" or "-" if the buttons have been locked.
- By switching off the electricity supply until the indicator lights are off.
- By means of the R100, see section 5.1.3 *Fault indications*.

When the R100 communicates with the pump, the red indicator light will flash rapidly.

11. Megging

Note: Megging of an installation incorporating E-pumps is not allowed, as the built-in electronics may be damaged.

12. Technical data – single-phase pumps

12.1 Supply voltage

1 x 200-240 V $\pm 10\%$, 50/60 Hz, PE.

See nameplate.

Back-up fuse

Motor sizes from 0.55 to 1.1 kW: Max. 10 A.

Standard as well as quick-blow or slow-blow fuses may be used.

12.2 Leakage current

Earth leakage current < 3.5 mA.

The leakage currents are measured in accordance with EN 60 355-1.

12.3 Inputs/output

Start/stop

External potential-free switch.

Voltage: 5 VDC.

Current: < 5 mA.

Screened cable.*

Digital

External potential-free switch.

Voltage: 5 VDC.

Current: < 5 mA.

Screened cable.*

Setpoint signals

- Potentiometer
0-10 VDC, 10 k Ω (via internal voltage supply).
Screened cable.*
Maximum cable length: 100 m.
- Voltage signal
0-10 VDC, $R_i > 50$ k Ω .
Tolerance: +0%/-3% at maximum voltage signal.
Screened cable.*
Maximum cable length: 500 m.
- Current signal
DC 0-20 mA/4-20 mA, $R_i = 175$ Ω .
Tolerance: +0%/-3% at maximum current signal.
Screened cable.*
Maximum cable length: 500 m.

Fault signal output

Potential-free changeover contact.

Maximum contact load: 250 VAC, 2 A.

Minimum contact load: 5 VDC, 1 mA.

Screened cable: 0.5 - 2.5 mm².

Maximum cable length: 500 m.

Bus input

GRUNDFOS bus protocol, GENIbus protocol, RS-485.

0.5 - 1.5 mm² screened 2-core cable.

Maximum cable length: 500 m.

* Cross section min. 0.5 mm² and max. 1.5 mm².

13. Technical data – three-phase pumps

13.1 Supply voltage

3 x 380-415 V $\pm 10\%$, 50/60 Hz, PE.

See nameplate.

Back-up fuse

Motor sizes from 0.75 to 5.5 kW: Max. 16 A.

Motor size 7.5 kW: Max. 32 A.

Standard as well as quick-blow or slow-blow fuses may be used.

13.2 Leakage current

Motor size [kW]	Leakage current [mA]
0.75 to 3.0	< 3.5
4.0 to 5.5	< 5
5.5 kW, 1400-1800 min ⁻¹	< 10
7.5	< 10

The leakage currents are measured in accordance with EN 60 355-1.

13.3 Inputs/output

Start/stop

External potential-free switch.

Voltage: 5 VDC.

Current: < 5 mA.

Screened cable.*

Digital

External potential-free switch.

Voltage: 5 VDC.

Current: < 5 mA.

Screened cable.*

Setpoint signals

- Potentiometer
0-5 VDC, 10 k Ω (via internal voltage supply).
Screened cable.*
Maximum cable length: 100 m.
- Voltage signal
0-5 VDC/0-10 VDC, $R_i > 50$ k Ω .
Tolerance: +0%/-3% at maximum voltage signal.
Screened cable.*
Maximum cable length: 500 m.
- Current signal
DC 0-20 mA/4-20 mA, $R_i = 250$ Ω .
Tolerance: +0%/-3% at maximum current signal.
Screened cable.*
Maximum cable length: 500 m.

Fault signal output

Potential-free changeover contact.

Maximum contact load: 250 VAC, 2 A.

Minimum contact load: 5 VDC, 1 mA.

Screened cable: 0.5 - 2.5 mm².

Maximum cable length: 500 m.

Bus input

GRUNDFOS bus protocol, GENIbus protocol, RS-485.

0.5 - 1.5 mm² screened 2-core cable.

Maximum cable length: 500 m.

* Cross section min. 0.5 mm² and max. 1.5 mm².

13.4 Other technical data

EMC (electromagnetic compatibility)

EN 61 800-3.

Motors of 0.55 to 5.5 kW, except for 5.5 kW, 1400-1800 min⁻¹:

Residential areas - unlimited distribution,
corresponding to CISPR 11, class B, group 1.

Motors of 7.5 kW and 5.5 kW, 1400-1800 min⁻¹:

Residential areas - limited distribution.

Industrial areas - unlimited distribution,
corresponding to CISPR 11, class A, group 1.

When pumps fitted with motors of 7.5 kW and 5.5 kW,
1400-1800 min⁻¹, are installed in residential areas, an additional
EMC filter is required to obtain class B, group 1 status.

The motor fulfils EN 50 178.

Contact GRUNDFOS for further information.

Enclosure class

Standard: IP 55 (IEC 34-5).

Insulation class

F (IEC 85).

Ambient temperature

During operation: -20°C to +40°C.

During storage/transport: -40°C to +60°C.

Relative air humidity

Maximum 95%.

Sound pressure level

Single-phase pumps:

<70 dB(A).

Three-phase pumps:

Motor [kW]	Speed stated on nameplate [min ⁻¹]	Sound pressure level [dB(A)]
0.75	2800-3000	63
	3400-3600	68
1.1	2800-3000	63
	3400-3600	68
1.5	2800-3000	63
	3400-3600	68
2.2	2800-3000	64
	3400-3600	68
3.0	2800-3000	64
	3400-3600	68
4.0	2800-3000	68
	3400-3600	73
	4200-4500	75
5.5	2800-3000	68
	3400-3600	73
	4200-4500	75
7.5	2800-3000	74
	3400-3600	79

GB

14. Disposal

Disposal of this product or parts of it must be carried out according to the following guidelines:

1. Use the local public or private waste collection service.
2. In case such waste collection service does not exist or cannot handle the materials used in the product, please deliver the product or any hazardous materials from it to your nearest GRUNDFOS company or service workshop.

Subject to alterations.

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Lote 34A
1619 - Garin
Pcia. de Buenos Aires
Phone: +54-3327 414 444
Telefax: +54-3327 411 111

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Brazil

GRUNDFOS do Brasil Ltda.
Rua Tomazina 106
CEP 83325 - 040
Pinhais - PR
Phone: +55-41 668 3555
Telefax: +55-41 668 3554

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
22 Floor, Xin Hua Lian Building
755-775 Huai Hai Rd, (M)
Shanghai 200020
PRC
Phone: +86-512-67 61 11 80
Telefax: +86-512-67 61 81 67

Czech Republic

GRUNDFOS s.r.o.
Cajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-438 906

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
Piispankylä
FIN-01730 Vantaa (Helsinki)
Phone: +358-9 878 9150
Telefax: +358-9 878 91550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706/27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
Flat A, Ground Floor
61/62 Chamiers Aptmt
Chamiers Road
Chennai 600 028
Phone: +91-44 432 3487
Telefax: +91-44 432 3489

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III/CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910/460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit 34, Stillorgan Industrial Park
Blackrock
County Dublin
Phone: +353-1-2954926
Telefax: +353-1-2954739

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290/95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin Miyakoda
Hamamatsu City
Shizuoka pref. 431-21
Phone: +81-53-428 4760
Telefax: +81-53-484 1014

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de Mexico S.A. de C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Mexico
Phone: +52-81-81 44 40 00
Telefax: +52-81-81 44 40 10

Netherlands

GRUNDFOS Nederland B.V.
Postbus 104
NL-1380 AC Weesp
Tel.: +31-294-492 211
Telefax: +31-294-492244/492299

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przemierowo
Phone: +48-61-650 13 00
Telefax: +48-61-650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Russia

OOO GRUNDFOS
Shkolnaya 39
RUS-109544 Moscow
Phone: +7-095 564 88 00, +7-095 737 30 00
Telefax: +7-095 564 88 11, +7-095 737 75 36
e-mail: grundfos.moscow@grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
24 Tuas West Road
Jurong Town
Singapore 638381
Phone: +65-6865 1222
Telefax: +65-6861 8402

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuenteclilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Lunnagårdsgatan 6
431 90 Mölndal
Tel.: +46-0771-32 23 00
Telefax: +46-31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fallanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
947/168 Moo 12, Bangna-Trad Rd., K.M. 3,
Bangna, Phrakonong
Bangkok 10260
Phone: +66-2-744 1785 ... 91
Telefax: +66-2-744 1775 ... 6

Turkey

GRUNDFOS POMPA SAN. ve TIC. LTD. STI
Bulgurlu Caddesi no. 32
TR-81190 Üsküdar Istanbul
Phone: +90 - 216-4280 306
Telefax: +90 - 216-3279 988

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971-4- 8815 166
Telefax: +971-4-8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 8TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

96 40 56 78 0403	134
Repl. 96 40 56 78 1002	