

OPERATOR'S MANUAL

81231X

SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING

INCLUDE MANUALS: 87100X Lower Pump End (pn 876015), 842001 Air Motor (pn 876019) & S-1099 General Information Manual (pn 876018).

RELEASED: 9-1-99

REVISED: 4-21-05

(REV. E)

4-1/4" AIR MOTOR

11:1 RATIO

6" STROKE

81231X

TWO BALL PUMP SERIES

300 SERIES STAINLESS STEEL



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine Bink's replacement parts to assure compatible pressure rating and longest service life.
- **861031 for repair of Air Motor section.**
- **861000 for repair of lower pump section.** Refer to the chart on page 2 for description of the pump.
- **861001 optional kit for repair of lower pump section.**

SPECIFICATIONS


Model Series (refer to option chart)	81231X
Type	Air Operated, Two Ball
Ratio	11:1
Air Motor	842001
Motor Repair Kit	861031
Motor Diameter	4-1/4" (10.8 cm)
Stroke	6" (15.2 cm)
Air Inlet (female)	1/2 - 14 N.P.T.F. - 1
Air Exhaust (female)	1-1/4 - 11-1/2 N.P.T.F. - 1
Lower Pump End Series	87100X
Lower Pump Repair Kit	86100X
Material Inlet	1 - 11-1/2 N.P.T.F. - 1 (female) & 2 - 11-1/2 P.T.F. spec. short (male)
Material Outlet (female)	1 - 11-1/2 N.P.T.F. - 1
Weight	42.9 lbs (19.5 kgs)

PERFORMANCE

Air Inlet Pressure Range	30 - 150 p.s.i. (2.1 - 10.3 bar)
Fluid Pressure Range	330 - 1747 p.s.i. (22.8 - 120.5 bar)
Maximum Rec'd Cycles / Minute	60
Displacement In³ Per Cycle	14.5
Volume / Cycle	8 oz. (238 ml)
Cycles Per Gallon	15.9
Flow @ 60 Cycles / Minute	3.7 g.p.m. (14.0 l.p.m.)
Noise Level @ 60 p.s.i - 40 cpm	81.8 db(A) *

* The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L_{Aeq}) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

PUMP DATA

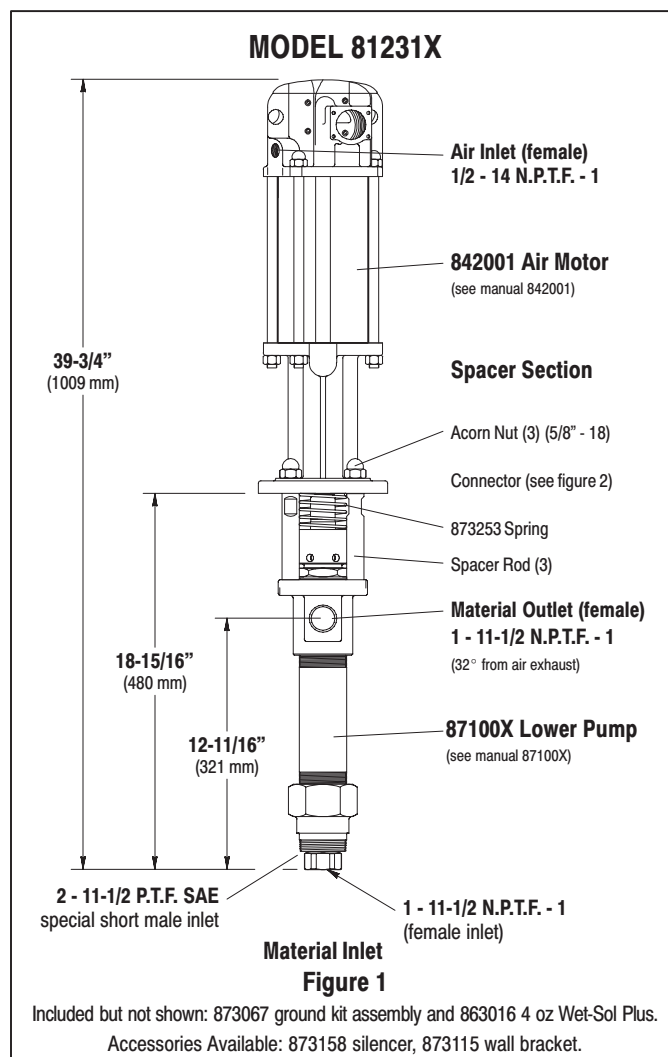

IMPORTANT

This is one of the four documents which support the pump. Replacement copies of these forms are available upon request.

- ☒ 81231X Model Operator's Manual (pn 876029)
- ☐ General Information - Industrial Piston Pumps (pn 876018)
- ☐ 87100X Lower Pump End Operator's Manual (pn 876015)
- ☐ 842001 Air Motor Operator's Manual (pn 876019)

BINKS®

North American Office
Industrial Finishing
195 Internationale Blvd
Glendale Heights, IL 60139
Tel. 630-237-5000 Fax 630-237-5011

International Office
Industrial Finishing
Ringwood Road, Bournemouth
Dorset, BH11 9LH, England
Tel. 0 1202 571111 Fax 0 1202 593883

PUMP OPTION DESCRIPTION CHART

81231 X

PLUNGER TYPE

PACKING MATERIAL

UHMW-PE (upper and lower)

Optional Glass filled P T F E / Leather staggered (upper and lower)

SPRING ARRANGEMENT

Multiple wave spring

PLUNGER TYPE

0 Hard Stainless Steel with hard chrome plating

5 Hard Stainless Steel with ceramic coating

GENERAL DESCRIPTION

⚠ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 1747 p.s.i. (120.5 bar) at 150 p.s.i. (10.3 bar) inlet air pressure.

**PUMP RATIO X
INLET PRESSURE TO PUMP MOTOR = MAXIMUM PUMP
FLUID PRESSURE**

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 150 p.s.i. (10.3 bar) inlet pressure is supplied to the motor of a 6:1 ratio pump it will develop a maximum of 900 p.s.i. (62.1 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

⚠ WARNING Refer to general information sheet for additional safety precautions and important information.

- The Two-Ball pumps are primarily designed for the pumping of medium viscosity fluids, Stainless Steel construction offers compatibility with a wide range of fluids. The two-ball design provides better priming of the lower foot valve. The double acting feature is standard in all Bink's industrial pumps, material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

TROUBLE SHOOTING

Pump problems can occur in either the Air Motor section or the Lower Pump End section, use these basic guidelines to help determine which section is affected.

If the pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or air leaks from the air motor.

If the pump cycles but does not deliver material.

- Refer to the lower pump end manual for further trouble shooting.

PUMP CONNECTION – UPPER / LOWER

NOTE: All threads are right hand.

1. Lay the pump assembly on a workbench.
2. Remove the three nuts from the three spacer rods (see figure 1).
3. Pull the air motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
4. Using e-ring pliers, slide the retaining ring up far enough to allow the sleeve to move upward and release the two connectors (see figure 2).

PUMP CONNECTOR DETAIL

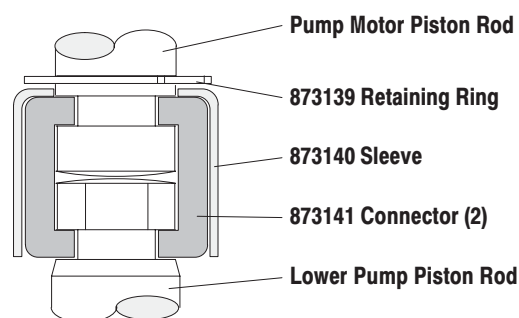


Figure 2

REASSEMBLY

1. Align the pump motor with the lower pump end.
2. Install the two connectors and retain with the sleeve, slide the retaining ring back into position.
3. Reinstall the spacer rods to the pump motor.
4. Bring the motor and lower pump together and retain with the three nuts.